

USER INSTRUCTION

PASSWORD LOCK

PRODUCT SPECIFICATION

Working Current	120mA	Working Voltage	4.5V
Working Temp.	0°C ~ 40°C	Working Humidity	20% ~ 80%

PANEL INTRODUCTION

2 5

DIGITS : Enter password

8 0

• SET: Cancel / Change password

TOUCH THE PANEL ACTIVATE SYSTEM

OK : Confirm

BUTTON INTRODUCTION



A / MODE: Mode switch button (Short press button A to switch mode)

B / RESET: Reset button (Default management code:12345678 user code:123456)

MODE INTRODUCTION

MANUAL-CLOSE MODE ("BEEP"SOUND):

Door will not lock until user enter the password.

(PUBLIC MODE: Keep lock open. Let the user set new user code to use the lock.)

AUTO-CLOSE MODE ("BEEP BEEP"SOUND):

Door will be locked after 6 seconds, or press"OK" sign close immediately.

APPLICATION MODE

MANAGMENT CODE : (8 DIGITS)

Once the managment code is entered to open the door, user code will become default.

USER CODE : (6 DIGITS)

LOW VOLTAGE ALARM


• When touch the panel, and the digits light flash, it means the lock is in low power status. Please change to new batteries immediately.

WARNING:

- 1. PLEASE TEST LOCK IF IT CAN WORK BEFORE CLOSING THE DOOR.
- 2. PLEASE USE NEW AAA ALKALINE BATTERY.
- 3. VOLTAGE INPUT CANNOT BE OVER THAN 6V.


** If you enter the wrong password three times in succession, the lock ** will alarm for 30 seconds. You may re-enter the password after end of alarm.

MANUAL-CLOSE MODE (PUBLIC MODE)

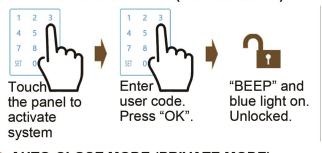




AUTO-CLOSE MODE (PRIVATE MODE)

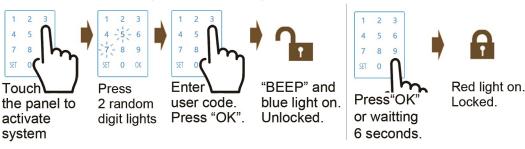

CHANGE USER CODE (6 DIGITS ONLY)



 



Code change successfully.

CHANGE MANAGEMENT CODE (8 DIGITS ONLY)

